

# Moore Support Vest



## Features:

- Sewn on expanders increases chest / waist size up to an additional 6"
- Adjustable shoulder straps provide better fit and comfort
- Tether strap quick release
- 4 point adjustability
- For 65 lbs. and up

## Part #'s

Medium Vest: MSV-30AI-ribbon color (optional)

Waist Size: 30" to 36"

Large Vest: MSV-38AI- ribbon color (optional)

Waist Size: 38" to 44"

### **Warning Label**

This is a positioning device only  
Must be used with a lap belt or lap shoulder belt system  
Designed for 65lbs and up

## Options: Ribbon Colors



Gray- Brain Cancer



Red- Stroke



Jigsaw- Autism



Green- Cerebral Palsy

Portion of proceeds donated to select foundations.



**BESI, Inc.**

*OEM Quality...Because It Matters*

[www.besi-inc.com](http://www.besi-inc.com)

9087 Sutton Place, Hamilton, OH 45011  
Toll Free: 800-543-8222 Fax: 513-874-0579

 
## Moore Support Vest

\*\*Must be used with a lap belt or a 3 point belt (lap/shoulder).

\*\*Minimum weight of 65 lbs. and 30" waist size

### Vest Installation

1. Place vest on passenger with zippers in the back, vest should fit snug
2. Adjust shoulder straps to fit, keeping the bottom of vest around the waist not above
3. Lay tether end over top of seat back. If a headrest is present the tether should go through the middle of the headrest and not around (lift headrest and feed through the middle). Push headrest back down for proper positioning
4. Fasten snap-hook into proper latch based on your vehicles instruction manual.
5. Once the tether is latched, pull adjusting strap snug
6. Use the lap/shoulder belt as designed (should be overtop the vest, not under the vest or behind the passenger) securing passenger in the seat.

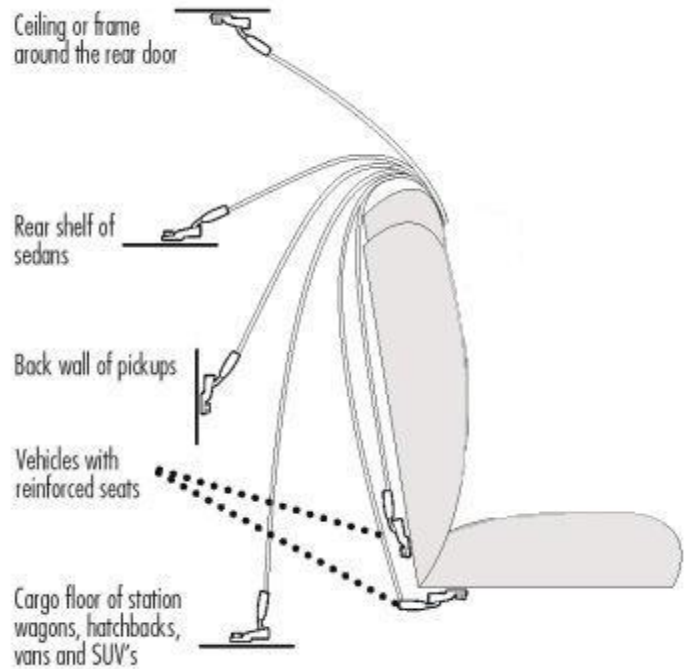

A tether anchor is a metal anchor (often a ring or bar) found behind the vehicle seat.



### Releasing the Vest to exit the vehicle

1. Release the lap/shoulder belt
2. Tether can be release in one of two places
  - a. Can be released at the side push buckle, leaving the snap-hook end still attached at latch hookup
  - b. Can be released at the latch hookup by squeezing the snap-hook, push into the latch mount, lift and pull out.
  - c. After releasing the tether either by step 2a or 2b. **The tether strap should never be left on the passenger.**
3. Vest can remain on the passenger if disconnected at the side push buckle or removed by unzipping in the back.