



# BESI Installation Instructions

**Warning!** Securement must only be used on school bus seats. Entire seat behind must be unoccupied or have secured occupants.  
Recommend replacement after 6 years in service.


## Pro Tech IV Assembly Instructions

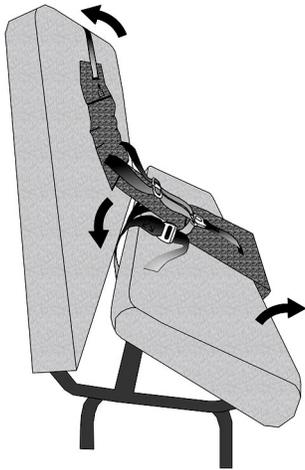


1. Unlatch and tilt seat cushion forward, then slide belt buckle tongue and 1" seat strap between the back and cushion. Re-secure seat cushion to factory specifications. For some seats, you may just need to push the belt buckle and 1" seat strap through the seat bight without lifting seat cushion.

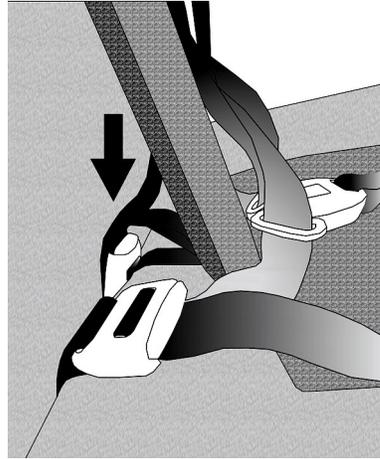


2. Land middle crotch strap adjuster behind Pro Tech seat pad into the seat bight. Crotch strap adjuster should be up high enough to be able to depress the button, but not so high that the student would be sitting on it.

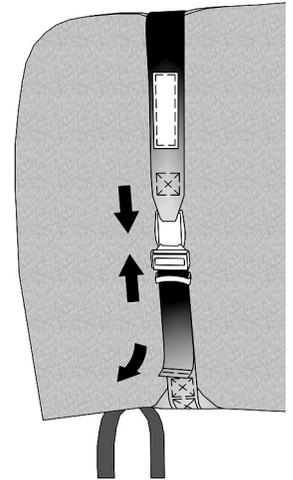


3. Once the crotch strap adjuster is in place, connect the seat belt buckle behind the seat making sure the buckle release is facing toward the seat back. Tighten the webbing until the top of the seat back depresses slightly.

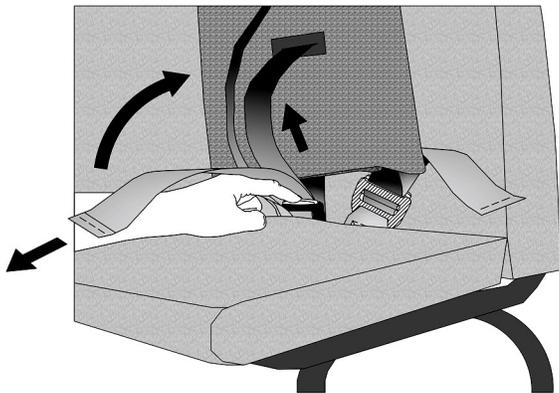

4. To adjust crotch strap, lift up Pro Tech seat pad, then depress crotch strap adjuster. Either pull up or down on the crotch strap to achieve appropriate length. Then put Pro Tech seat pad down and connect 1" seat strap to help keep Pro Tech seat pad in place.

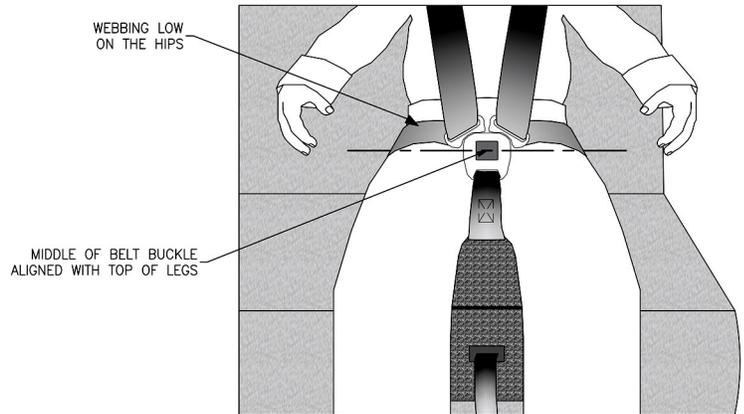


5. The middle of the crotch strap buckle should be in-line with the top of the legs to achieve proper fit.

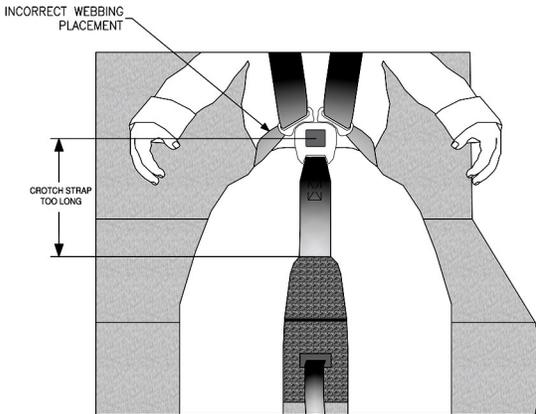


**X** INCORRECT CROTCH STRAP LENGTH. MIDDLE OF BUCKLE SHOULD ALIGN WITH TOP OF LEGS. WEBBING SHOULD BE LOW AROUND HIPS, NOT TORSO AREA.

**Warning:** Do not make crotch strap too long. Webbing should be low on the hips, not around torso area.

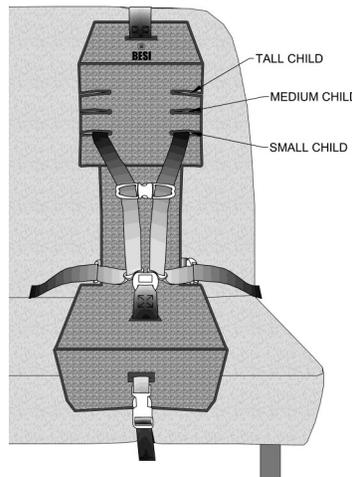

6. Select proper shoulder belt slot for child. Straps should be at or just above the shoulders.

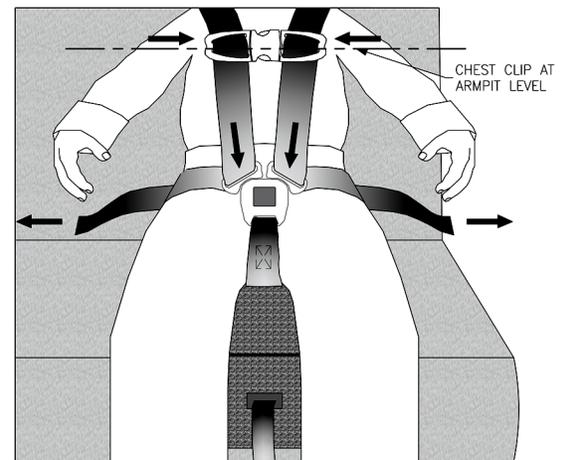

7. Connect child belt buckle and chest clip (adjust to armpit level), then tighten straps by depressing side adjusters and pulling on webbing until snug.