Pro-Tech II and Pro-Tech III **Installation Sheet**



Unfold unit. Take the cam-wrap strap with the buckle tongue end and drop down between the back and cushion.



Put cushion in place and latch. Under the cushion, bring forward and connect the 1" strap to the front side push buckle (holding the pad on the seat).




Push the Pro-Tech snug against the seat back. Connect the cam-wrap on the back of the seat and adjust to a snug position.



Adjust for torso heights; lower slip for shorter, middle slip for medium and upper slip for taller. Slide webbing out then into the correct slot to make the proper adjustment.



When using the Pro-Tech II Place child in seat, connect the colot coded straps together pull the ad justment straps to fit firmly across the hip and shoulder ateas.

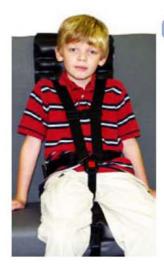

When using the Pro-Tech III Place child in seat, connect the left and right side straps into the center push button buckle, pull the adjustment straps to fit firmly across the hip and shoulder areas.

The straps should be firm enough for you to place your index finger between the child and the belt.



